


how to be SaSi

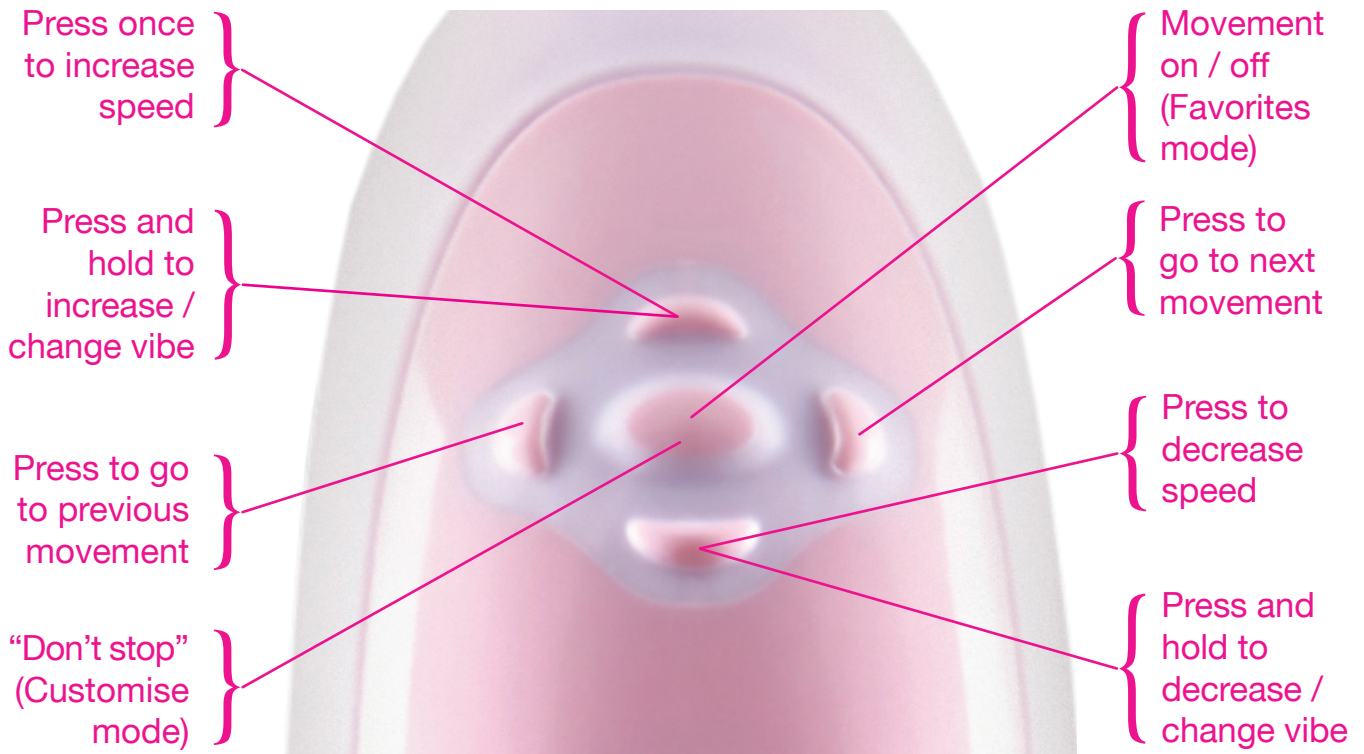

To turn SaSi on hold down the center button for two seconds. You will feel a vibration and the pad will flash green signifying that the handset is ready. Tap the center button again to turn it on.

To choose between modes simply press the left or right button. Then, when you are ready, press the middle button once to start your SaSi moving in that mode.

Favorites mode is indicated by a green flashing light; Customise mode is signified by a red flashing light.

To turn SaSi off—at anytime—hold down the center button for two seconds.

On / Off

Favorites Mode

Customise Mode

